

AUTOMATIC FAUCET

(INSTALLATION INSTRUCTIONS)

● Capability

Water pressure: 0.05~0.6MPa

Power: 3.6V/2Ah


Induction distance: 3~300mm

Temperature: 0~60℃

Pipe: 24*1

Material: ABS outer box

● Installtion

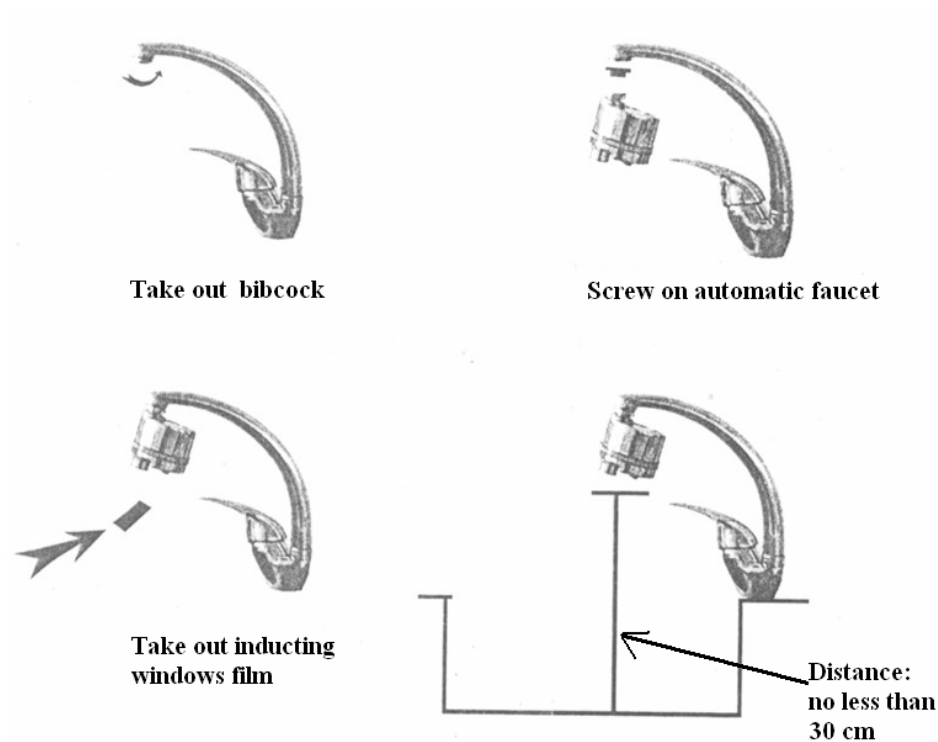

● Method of use

After the inducting faucet is installed correctly, When hand or other object goes into the inducting zone, the faucet will induct automatically and turn the water on; when leave the faucet, the faucet will turn the water off automatically. When being used more than 1 minute, it will turn off automatically. If using again, it needs to be inducted again after keeping away the faucet.

● Maintenance

1. Keep the inducting faucet clean, when blot is found, wipe the faucet with clean soft cloth.
2. When the flux of the faucet is too small, take out the filtering core of the control, wash it clean and install over again.